



Step one : Drill the installation holes: drill 12mm in diameter and 70mm in length according to the marked dimension.

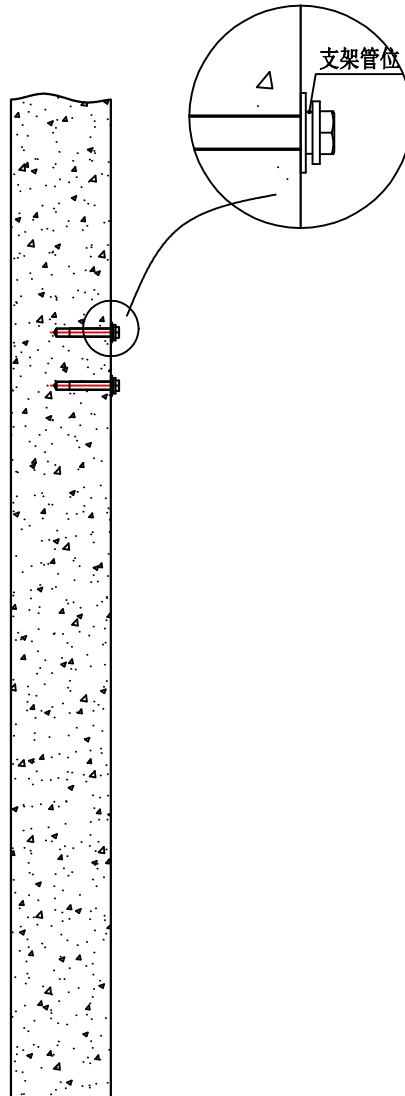

Step two: Lock the explosive screw: drive 12mmx65mm explosive screw into the mounting holes and tighten with it with a wrench.

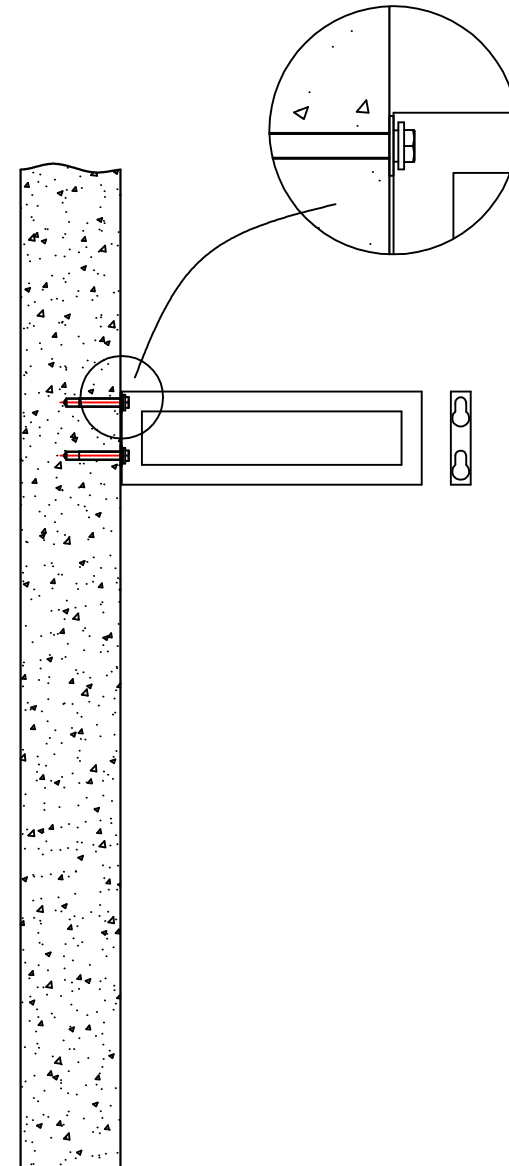

Step three: Install the holder : Install the holder to the screw tube position.